


BBX Sidepanel Kit

Step1

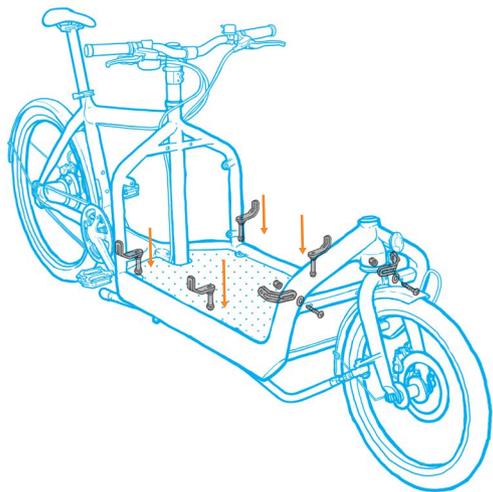

Tools you need:




Spanners/Wrenches

10
mm




Allan/Hex key

4
mm




X 2


X 4

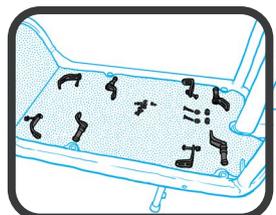

1 Line up all the appropriate fittings on the Honeycomb board.

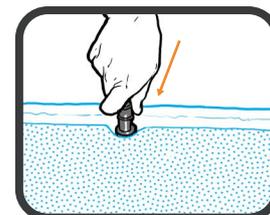


2 Insert the four brackets with rubber O-rings into the frame holes.

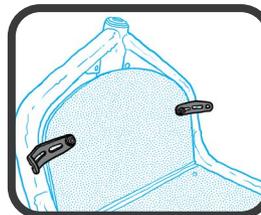


3 Hand tighten the two front plate brackets. Be aware: Do not tighten until sidepanels are attached!

Step2


Attaching the back Panel

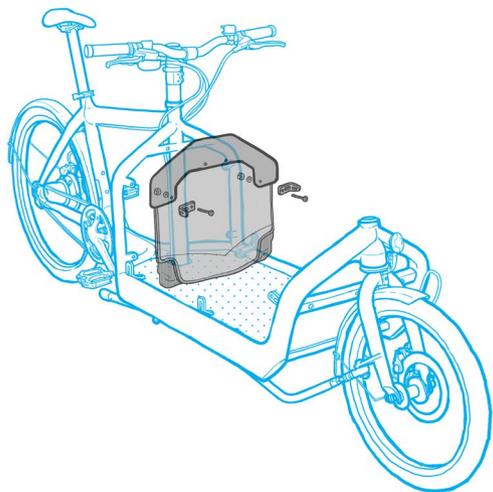

Back panel front and back

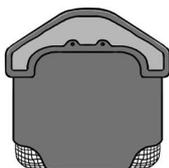


Front

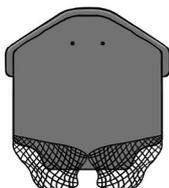


Back




X 2

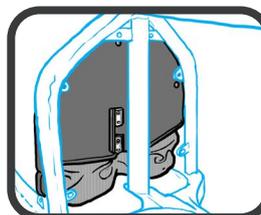

1 Attach the fabric onto the frame...

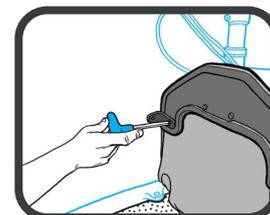




2 and then attach the Honeycomb backpiece and rear brackets on top of the fabric backpiece...

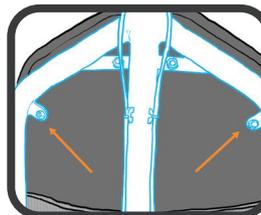

3 ... using the four attachment points. Be aware: Only hand tighten the thread locked nuts!

Step3


Sidepanels

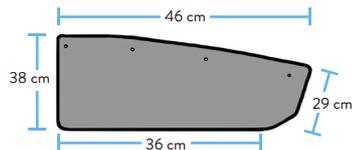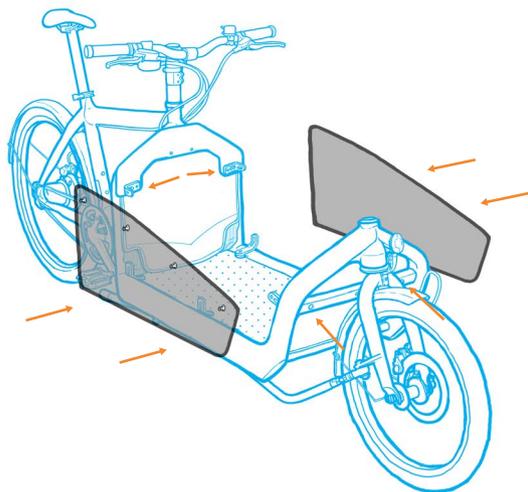


Sidepanels X 2




X 8

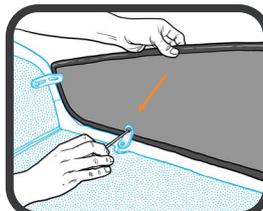

1 Attach both side panels using the grub screws and ensuring they are aligned to the frame.

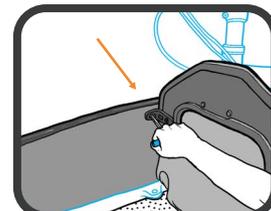



2 Now tighten the back brackets...

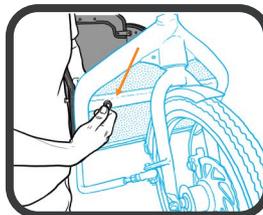


3 ... and then the front plate brackets.

Step4


Top cover

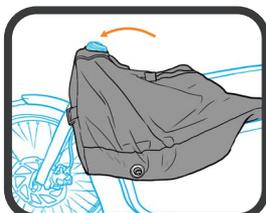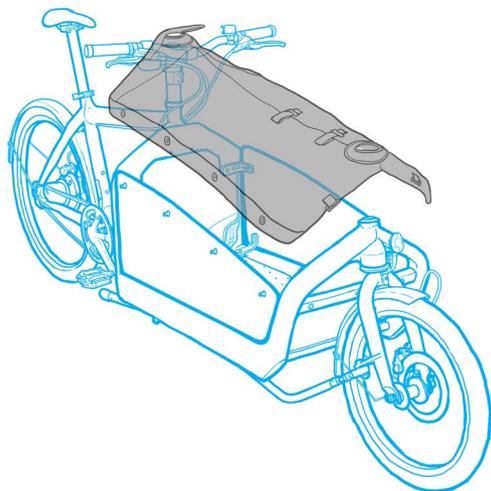


1 Place the the front of the fabric cover over the headtube...

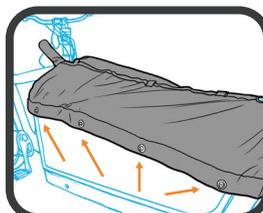


2 ...tension fabric using the attachment points on the side panels.

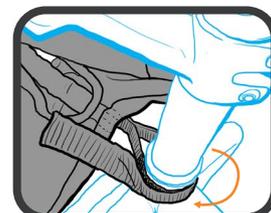


3 "Tighten the first velcro strap under the headset cup on the steerer tube to ensure the cover's fabric is tensioned correctly."

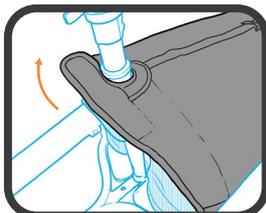

4 Pull the velcro ends together behind the steerer tube.

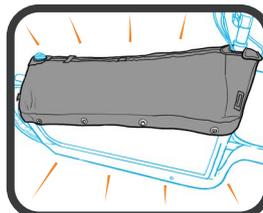

5 Et viola!!v

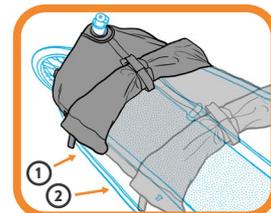

In Use. Variable coverage options for passengers.