



Honeycomb Board

Step1

Attach to the frame

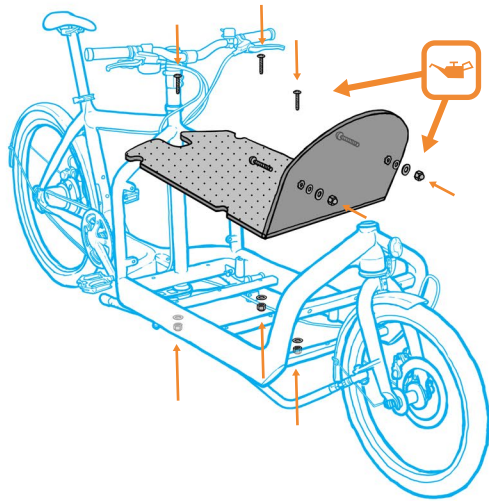

Tools you need:



Spanners/Wrenches

10
mm



Grease



Phillips Screwdriver




X 3




X 2


* Be aware! If installing the side panel kit, the front plate nuts and bolts are not required.

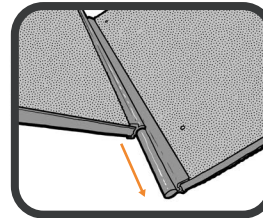

1 Slide the front plate and bottom plate together...

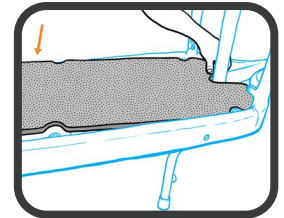



2 ... and place the two sections onto the frame. Rear end first.

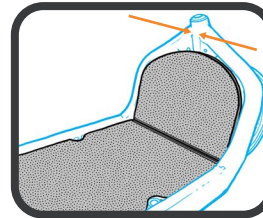


3 Ensure the plate is aligned in the center of the frame.

Step2


Tighten screws and bolts

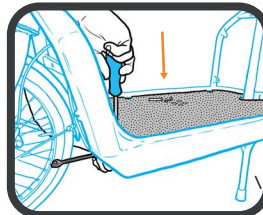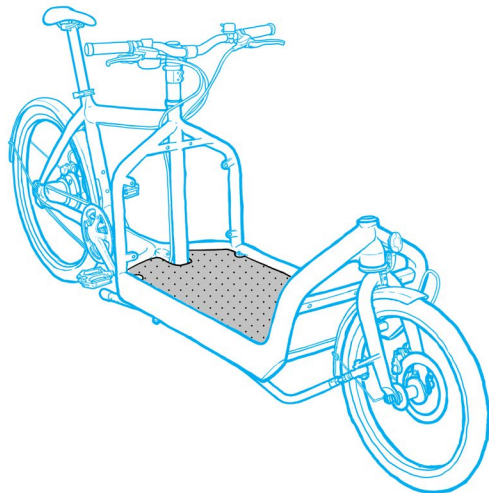


1 Place your tools on the middle of the plate.

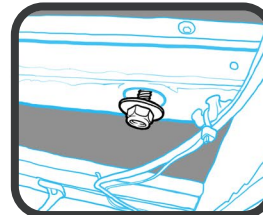

2 The three thread locked nuts lie underneath the bottom plate...

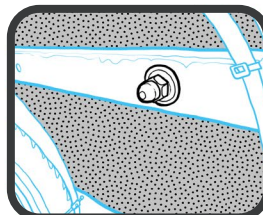

3 ... and the two closed end nuts attach to the front plate.

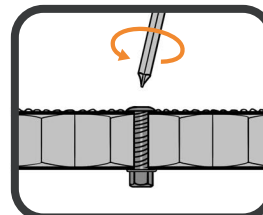

4 Screw tension should indicate a small dimple on the honeycomb surface.